

VINCEMAN

FICHE TECHNIQUE

Le groupe sur scène est composé de 4 musiciens :


- Vincent FOURNIER (chant lead et guitare)
- J.P. ARNAL (batterie, chant et machines)
- Greg MARTIN (basse et chant)
- Patrice BUI (guitare et chant).

Le groupe utilisera 4 circuits retour (3 en wedge et 1 ear géré par le batteur auquel on enverra une ligne d'Aux Stereo).

Le wedge du bassiste sera monté de préférence en 15".

Vous trouverez tous les détails techniques et l'implantation du groupe ci-dessous.

PLAN DE SCENE

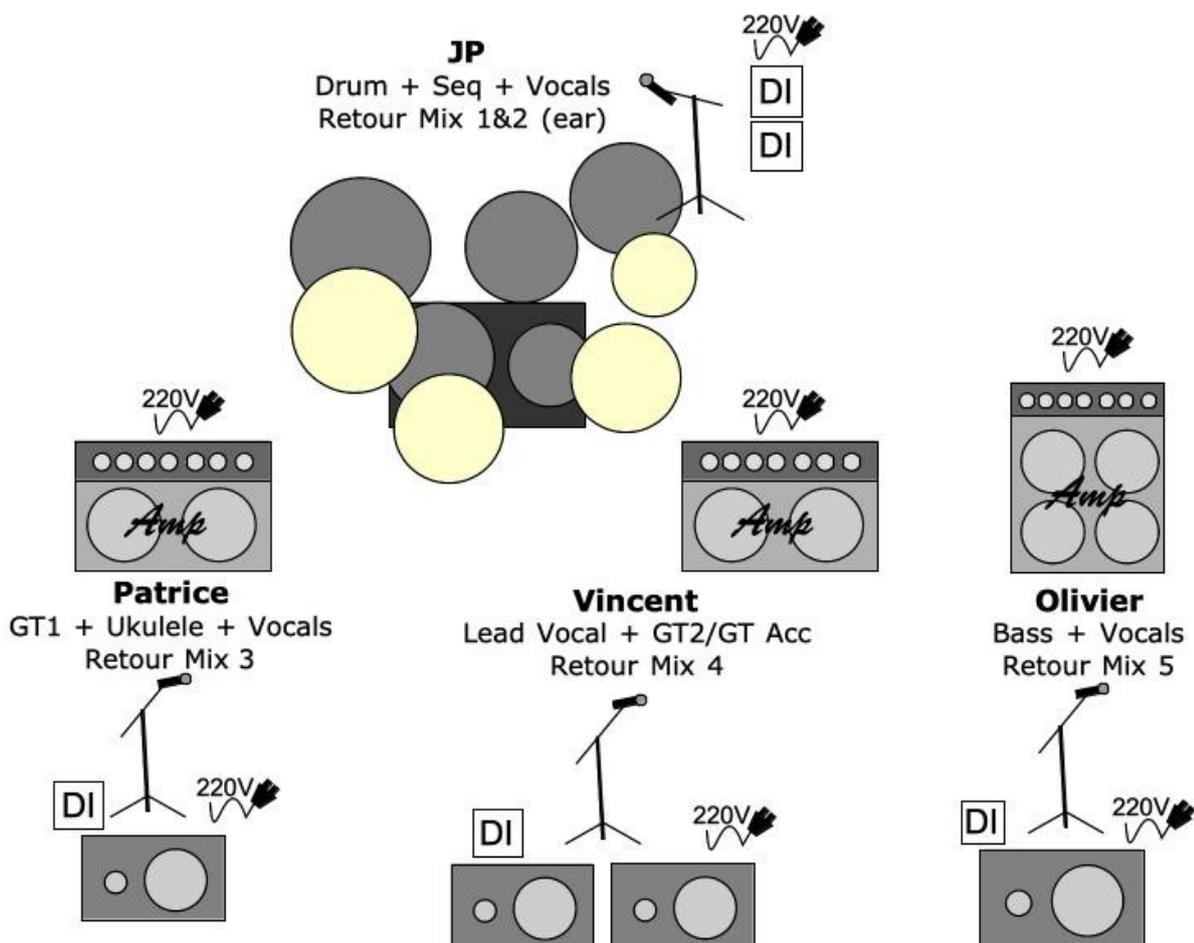

Contact Groupe : Vincent FOURNIER
+33 (0)6 13 61 20 47

Contact Ingé FOH : François DUPUY
+33 (0)6 82 68 29 14

VINCEMAN

FEUILLE DE PATCH

INPUT	INTRUMENT	MIC TYPE	INSERT	STAND
1	Kick Out	Audix D6 / Beta 52		Petit pied + perchette
2	Kick In	SM91		Petit pied + perchette
3	Snare 1 Top	Shure SM57		Petit pied + perchette
4	Snare 1 Bottom	Shure SM57		Petit pied + perchette
5	Snare 2 Top	Shure SM57		Petit Pied + perchette
6	Snare 2 Bottom	Shure SM57		Petit Pied + perchette
7	Hi Hat	AKG C451		Petit pied + perchette
8	Rack Tom 1	Audix D2 / E604	Gate	Pince
9	Floor Tom	PG52 / Audix D4 / E604	Gate	Pince
10	OH L	AKG C414 / C451		Grand pied + perchette
11	OH R	AKG C414 / C451		Grand pied + perchette
12	SPDS L	DI		
13	SPDS R	DI		
14	Bass Amp	421	Comp	
15	Bass DI	DI		
16	Guitar 1	Shure SM57 / E906		Petit pied + perchette
17	Ukulele	DI		
18	Guitar 2	Shure SM57 / E906		Petit pied + perchette
19	Guitar Acc	DI		
20	Voc LEAD	Shure Beta 58		Grand pied + perchette
21	Voc Drums	Shure Beta 58		Grand pied + perchette
22	Voc GT	Shure Beta 58		Grand pied + perchette
23	Voc Bass	Shure Beta 58		Grand pied + perchette

Contact Groupe : Vincent FOURNIER
+33 (0)6 13 61 20 47

Contact Ingé FOH : François DUPUY
+33 (0)6 82 68 29 14